


Installation instructions

Scotchlok connector for IP68 installations GWFcoder® (5/6 roller wheels) – RCM® split radio module

1. Remove the cable end sleeves.

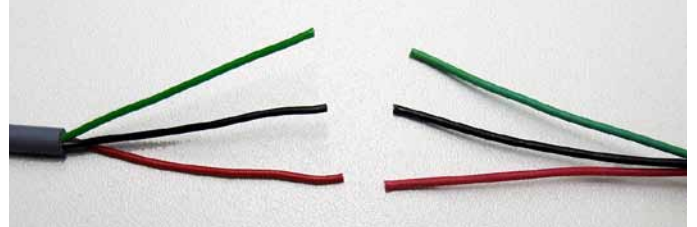

2. Insert one end of each cable as far as possible into the two openings of the Scotchlok connector.

Do not remove the insulation from the ends of the cables.




When connecting the IP68 GWFcoder® meter to the RCM® split radio module, interconnect the red and black ends of the cables. The polarity of the ends of the cables is not important.

The green wire for the IP68 GWFcoder® meter and for the RCM® split radio module must be cut off as close to the cable as possible.

3. Use a pipe wrench to crimp the clamp.

The cable ends must remain fully inserted in the Scotchlok connector.

Important: 2 x 0,25 mm² cable must be used for the cable extension (**only stranded cable, not wire**).

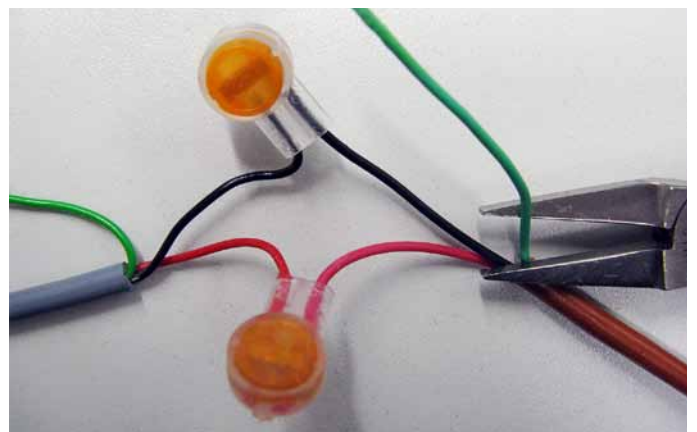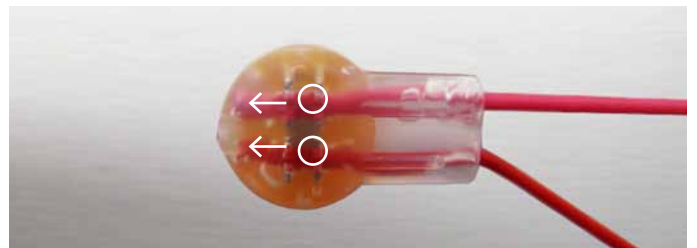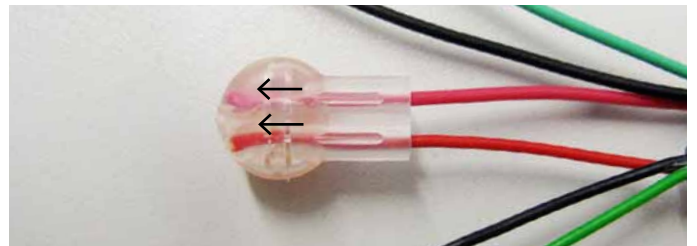

BAe40225 – 02.02.2015
Subject to modification

GWF MessSysteme AG
Obergrundstrasse 119
P.O.Box 2770
6002 Lucerne, Switzerland

T +41 41 319 50 50
F +41 41 310 60 87
info@gwf.ch, www.gwf.ch

swiss.smart.simple.

GWF